

DE Montageanleitung

EN Mounting instruction

ES Instrucciones de instalación

FR Instructions d'installation


IT Istruzioni per l'installazione

NL Montagehandleiding


CS Návod k instalaci

PL Instrukcja montażu

RU Инструкция по монтажу

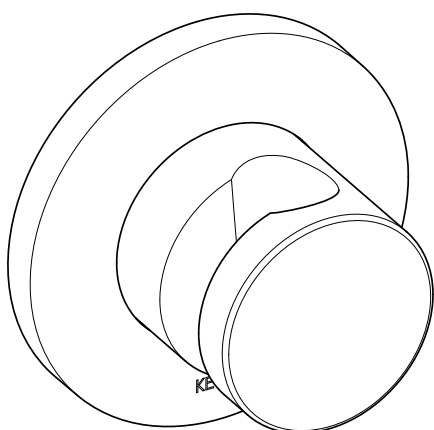

59591 010001 59591 030001
 59591 050001 59591 070001
 59591 130001 59591 170001

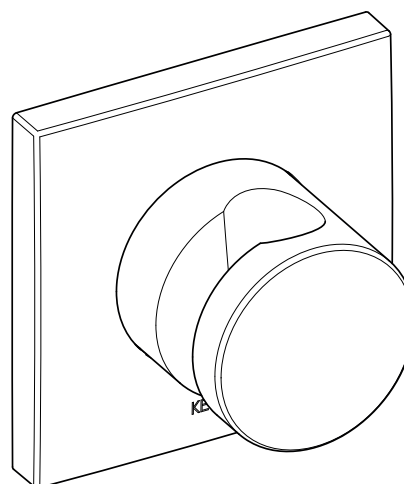

59591 010002 59591 030002
 59591 050002 59591 070002
 59591 130002 59591 170002

DE Einbaumaße

EN Mounting dimensions

ES Dimensiones de montaje

FR Cotes de montage


IT Ingombro

NL Montageafmetingen


CS Montážní rozměry

PL Wymiary montażowe







RU Монтажные размеры

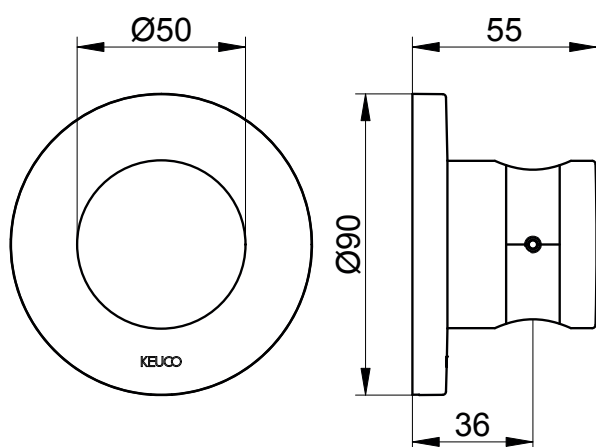

59591 010001 59591 030001
 59591 050001 59591 070001
 59591 130001 59591 170001

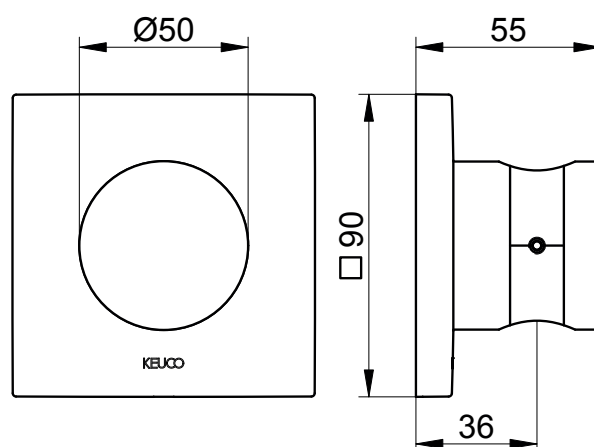

59591 010002 59591 030002
 59591 050002 59591 070002
 59591 130002 59591 170002

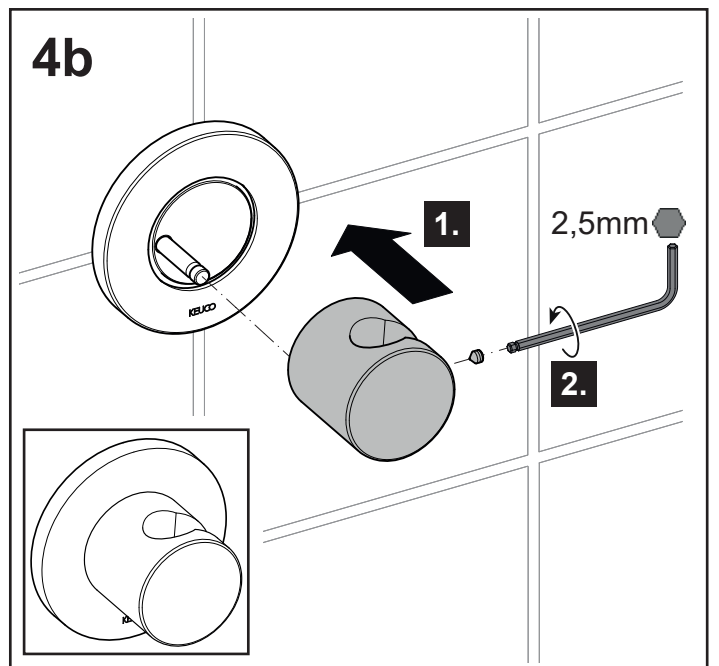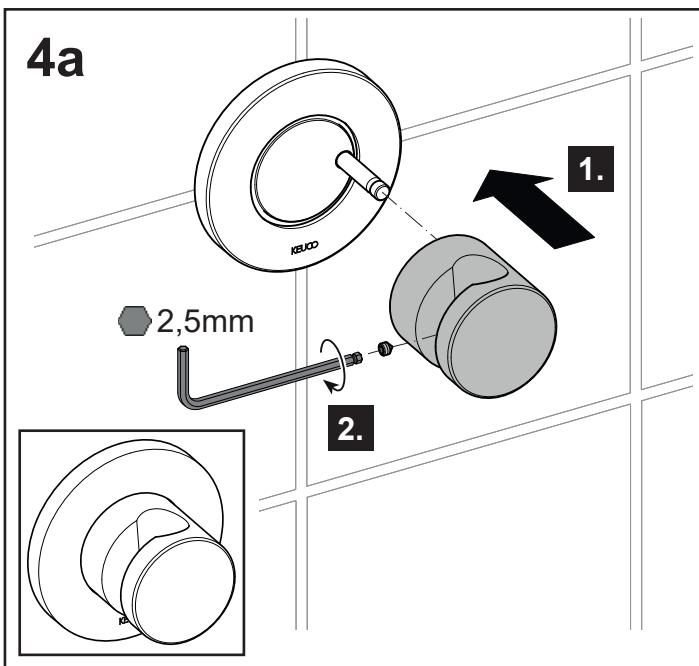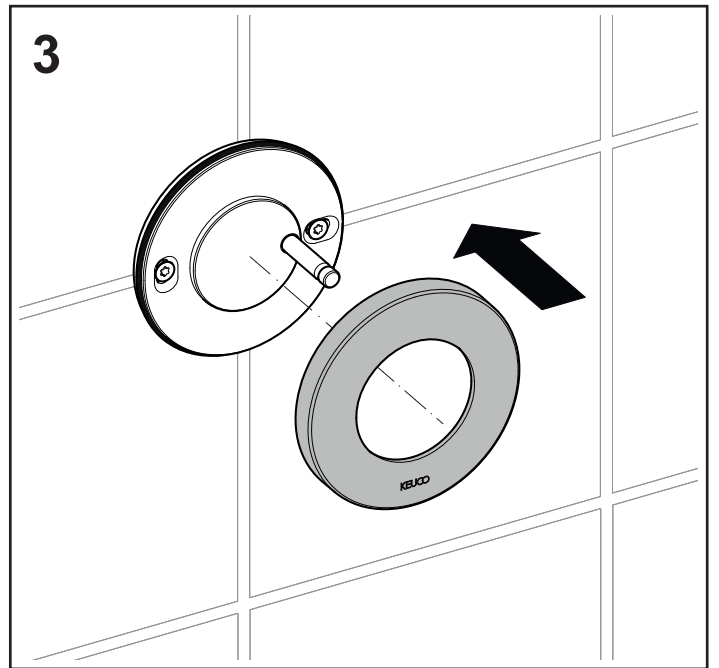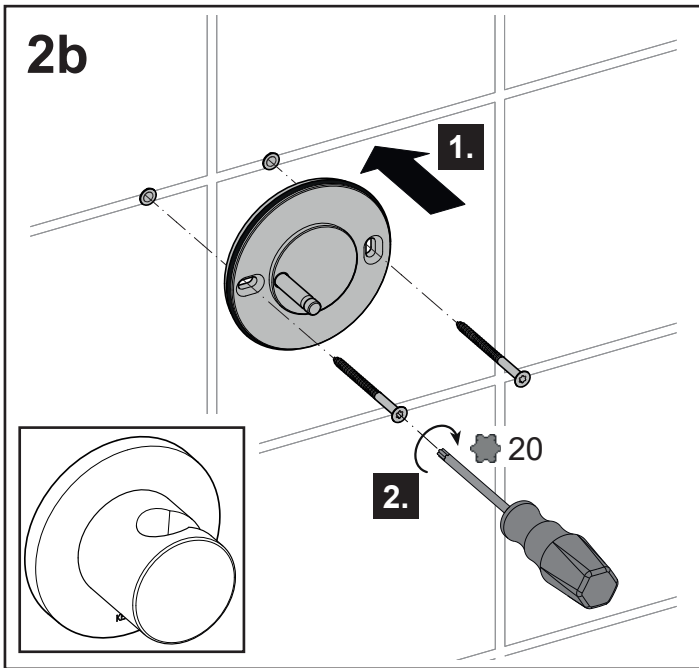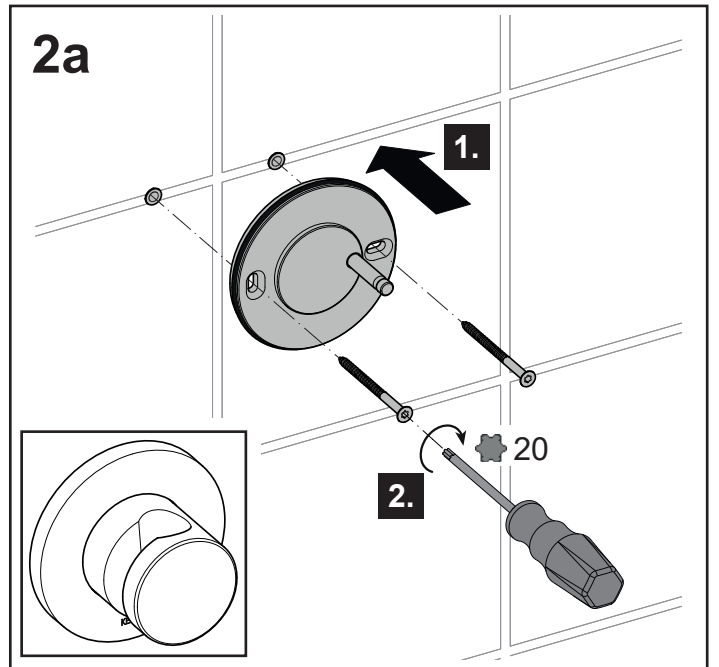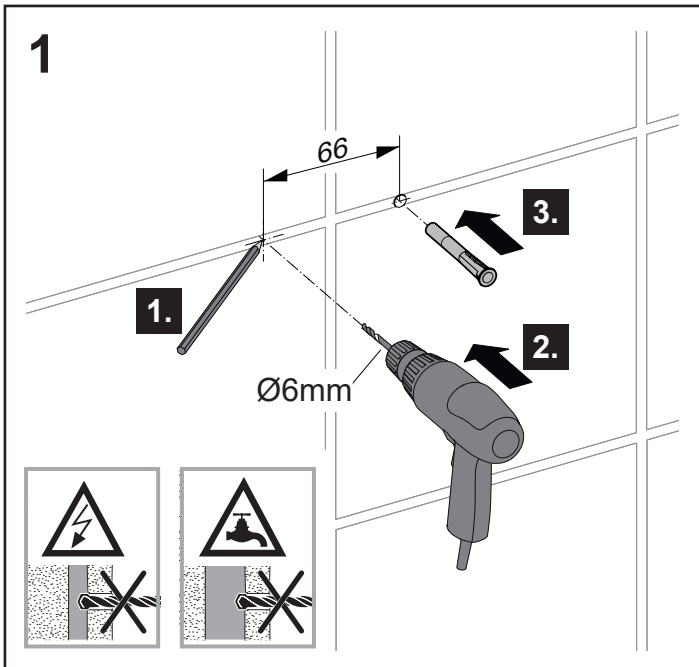

DE Ersatzteile

FR Liste de pièces

CS Náhradní díly

EN Spare parts

IT Ricambi

PL Części zamienne

ES Piezas de recambio

NL Reserveonderdelen

RU Запчасти

