

DE Montageanleitung

FR Instructions d'installation

CS Návod k instalaci

EN Mounting instruction







IT Istruzioni per l'installazione

PL Instrukcja montażu

ES Instrucciones de instalación

NL Montagehandleiding

RU Инструкция по монтажу

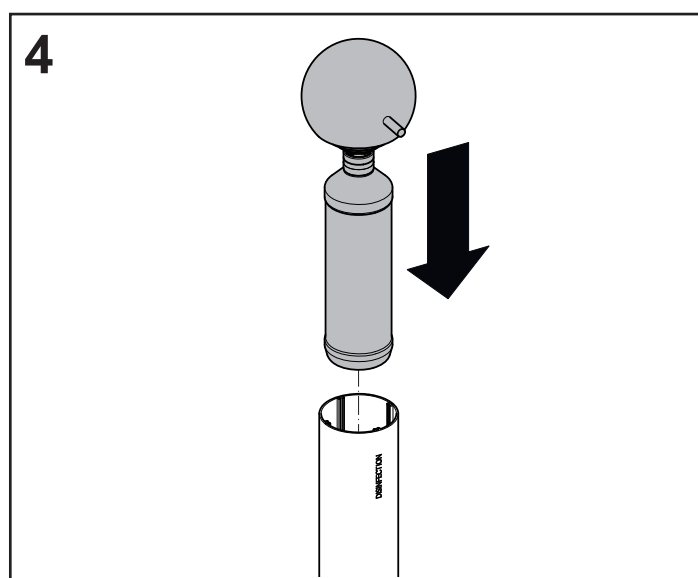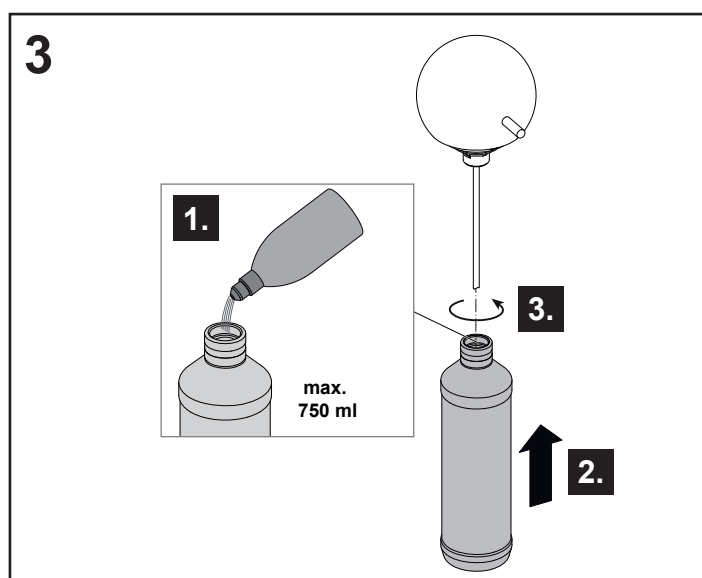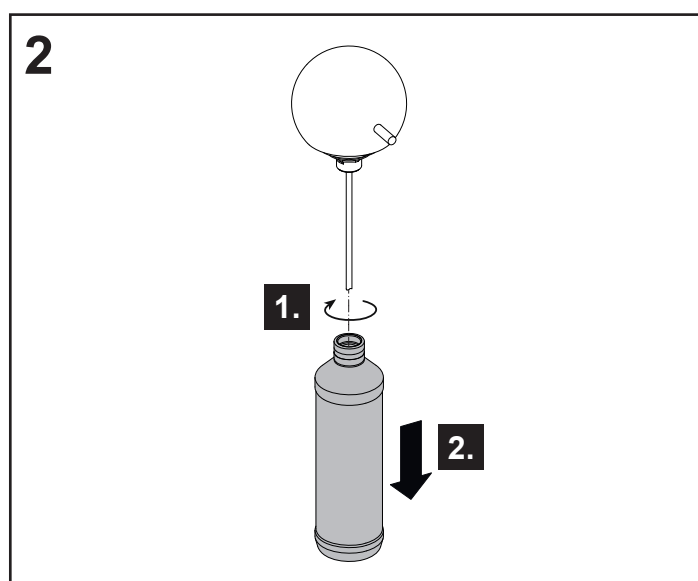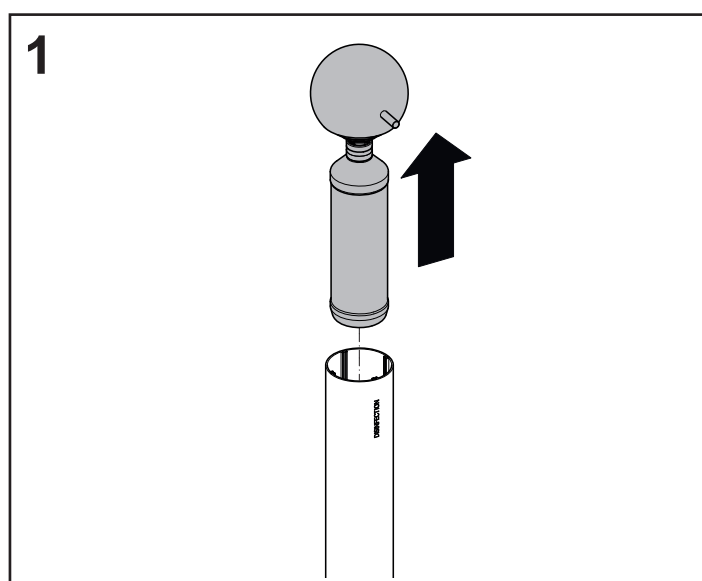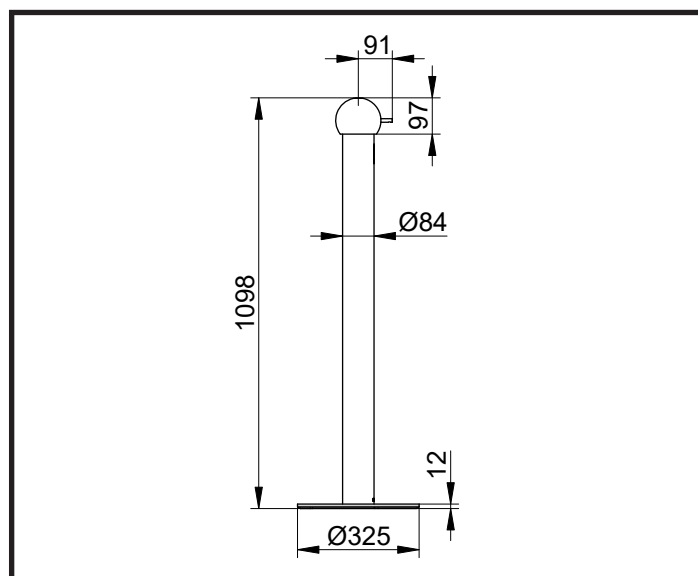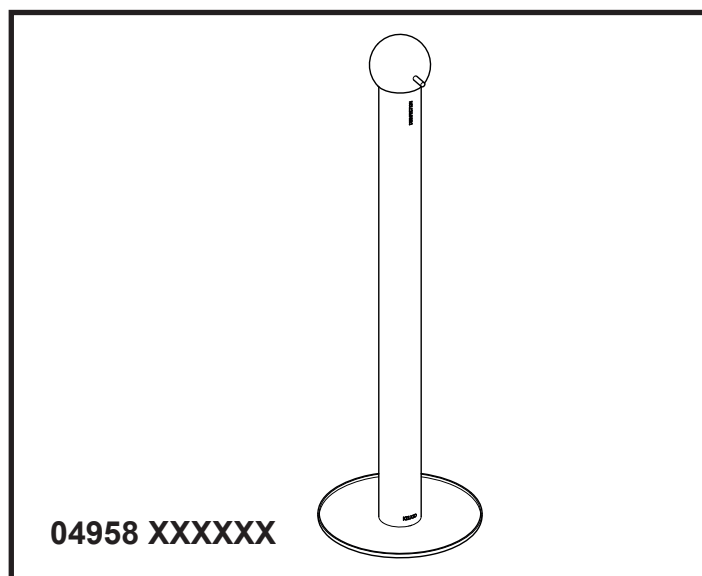

DE Ersatzteile

FR Liste de pièces

CS Náhradní díly

EN Spare parts

IT Ricambi

PL Części zamienne

ES Piezas de recambio

NL Reserveonderdelen

RU Запчасти

04958 000401
04958 000402
04958 000403
04958 000421
04958 000422
04958 000423
04958 170400
04958 330400
04958 330451
04958 370400
04958 370433
04958 370456
04958 510400
04958 510433
04958 510453
04958 530400
04958 530437

